


LOCALISATION DES SUPPORTS ENTREE / SORTIE D'AGGLOMERATION

ZAE SALVAZA

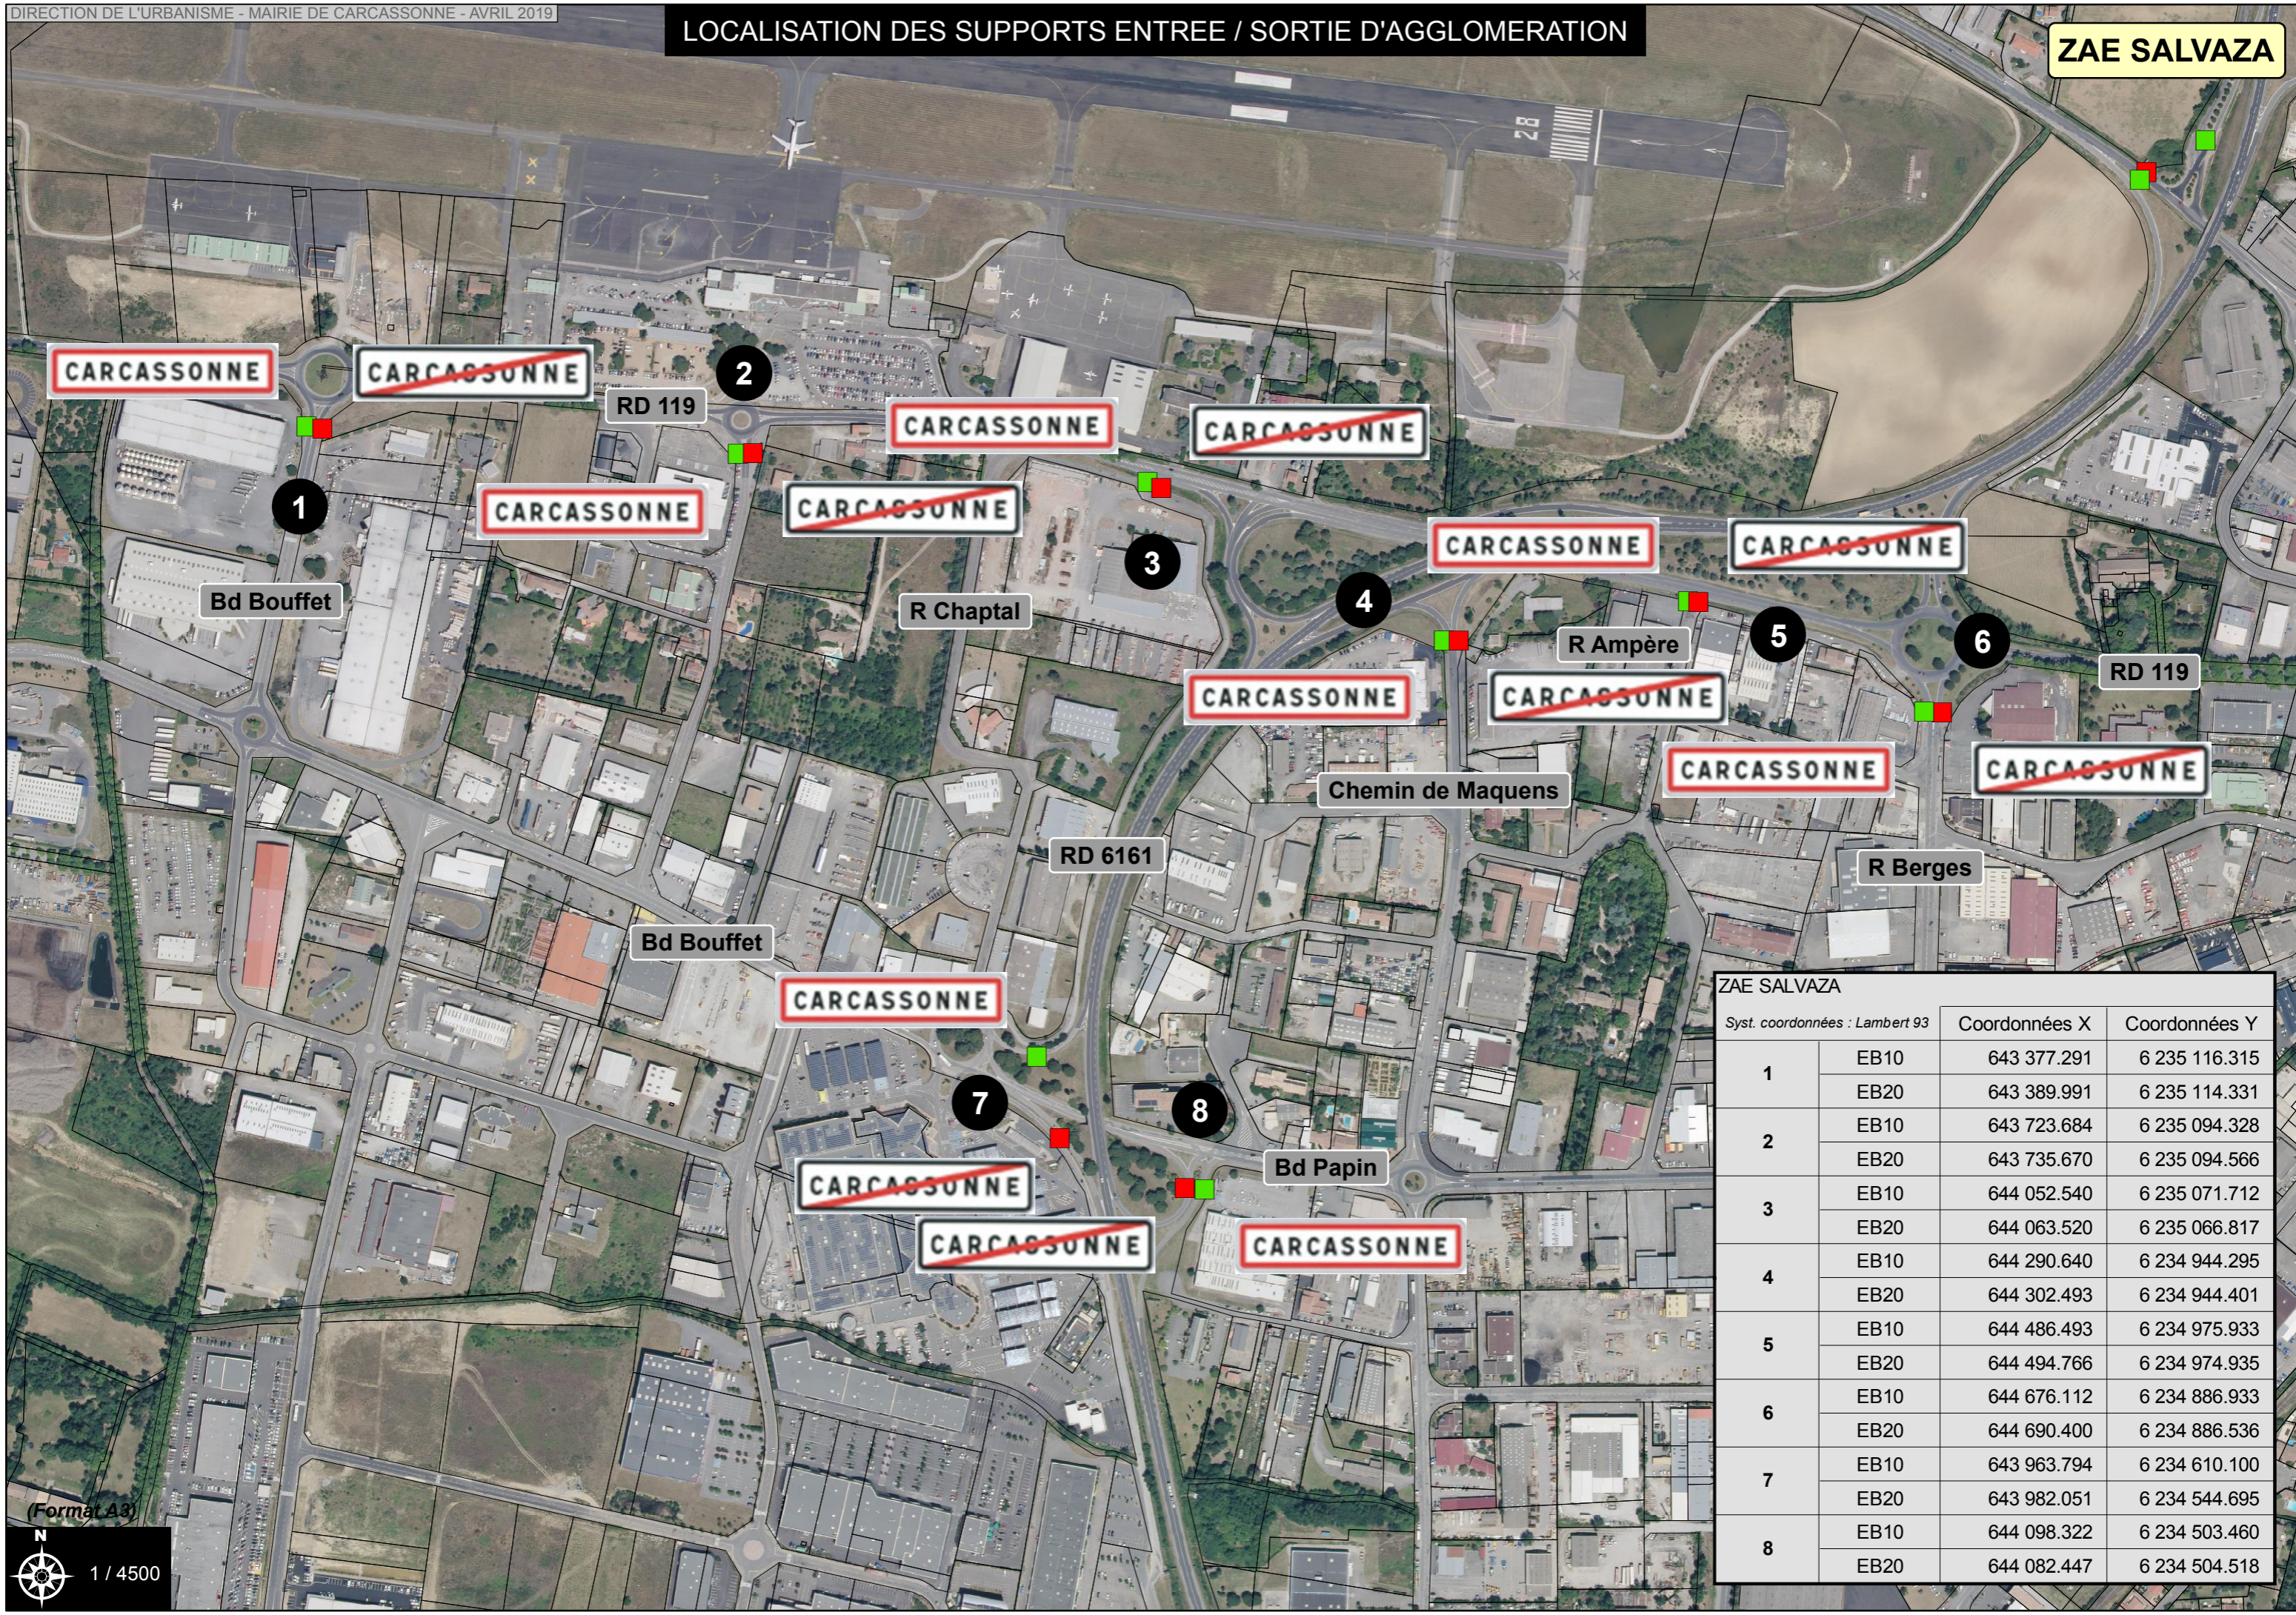

ZAE SALVAZA			
Syst. coordonnées : Lambert 93			
		Coordonnées X	Coordonnées Y
1	EB10	643 377.291	6 235 116.315
	EB20	643 389.991	6 235 114.331
2	EB10	643 723.684	6 235 094.328
	EB20	643 735.670	6 235 094.566
3	EB10	644 052.540	6 235 071.712
	EB20	644 063.520	6 235 066.817
4	EB10	644 290.640	6 234 944.295
	EB20	644 302.493	6 234 944.401
5	EB10	644 486.493	6 234 975.933
	EB20	644 494.766	6 234 974.935
6	EB10	644 676.112	6 234 886.933
	EB20	644 690.400	6 234 886.536
7	EB10	643 963.794	6 234 610.100
	EB20	643 982.051	6 234 544.695
8	EB10	644 098.322	6 234 503.460
	EB20	644 082.447	6 234 504.518